


1. Brennergehäuse

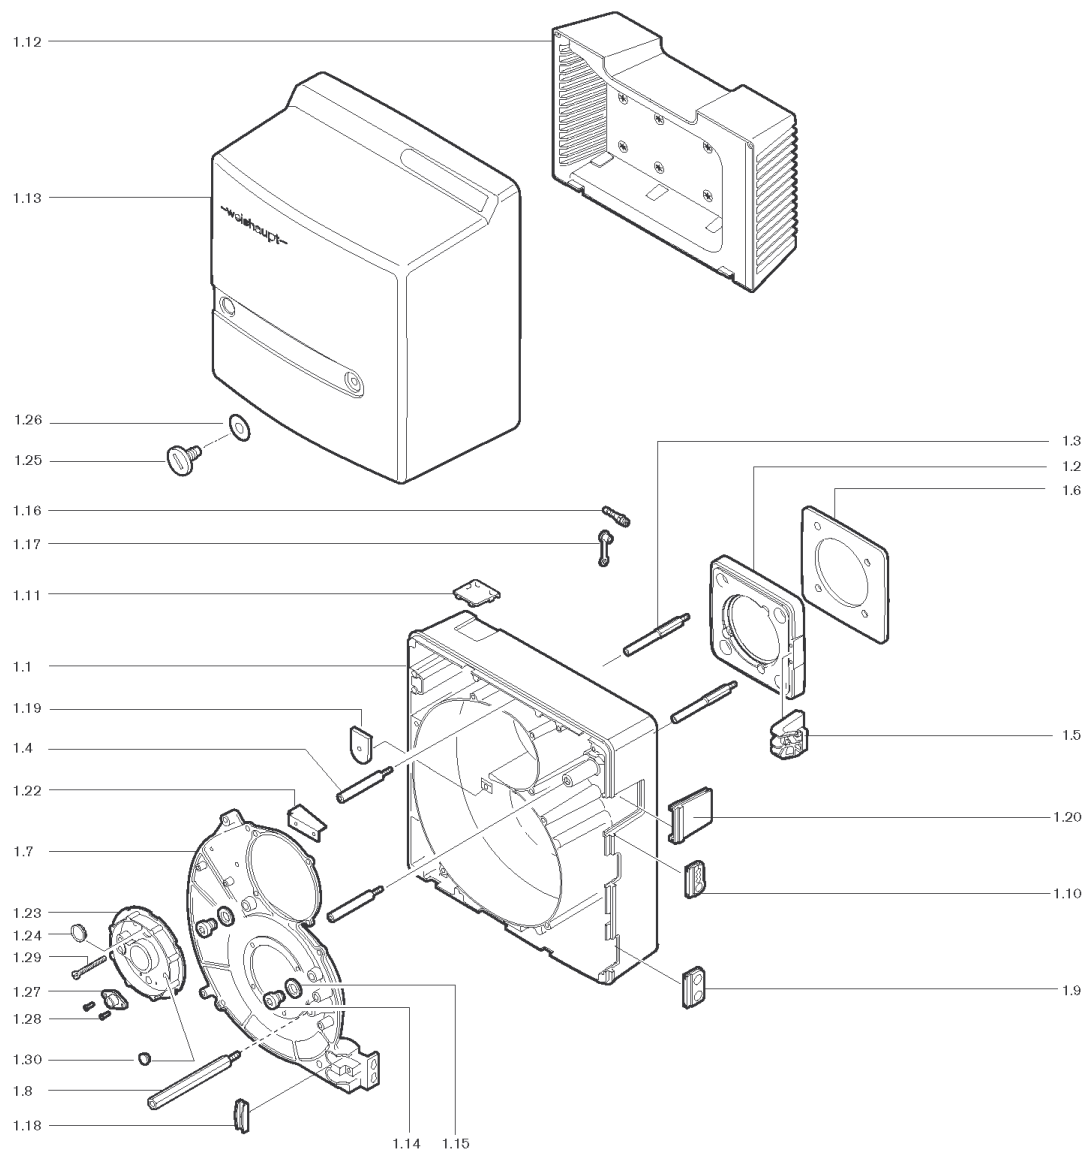

2. Löse mitzunehmende Teile

This diagram illustrates the removal of various components from the front panel assembly. The components are labeled with callouts 2.1 through 2.8:


- 2.1: A rectangular panel with a handle, shown being detached from the main assembly.
- 2.2: A screw, shown being removed from the panel.
- 2.3: A washer, shown being removed from the panel.
- 2.4: A knob, shown being removed from the panel.
- 2.5: A rectangular component, shown being removed from the panel.
- 2.6: A rectangular component, shown being removed from the panel.
- 2.7: A rectangular component, shown being removed from the panel.
- 2.8: A cable, shown being removed from the panel.




Bilde nr	Holte Industri v.nr.	Weishaupt varenr.	Beskrivelse
1.	Brenner		
1,1		241 210 0101 2 E	Burner casing
1,2	WH200060	241 210 0105 7 E	Brennerflens
1,3	WH200065	241 310 0124 7 E	Bolt M8 for brennerhus/flens
1,4	WH200065	241 310 0125 7 E	Bolt M8 for brennerhus/flens
1,5	WH200070	241 210 0106 7 E	Bærearmer for serviceposisjon
1,6	WH200050	241 210 0110 7 E	Flenspakning til WL/WG 20
1,7	WH208580	241 210 0104 7 E	Viftehusdeksel WL-WG20
1,8	WH200120	241 210 0120 7 E	Bolt for brennerdeksel
1,9	WH200110	241 400 0117 7 E	Oljeslangegjennomføring
1,1		241 200 0124 7 E	Grommet
1,11	WH200045	241 210 0119 7 E	Seglass timeteller
1,12	WH200010	241 210 0108 2 E	Luftinntak deksel WL/WG 20
1,13	WH200020	241 210 0111 2 E	Deksel komplett WL20
1,14		409004 Z	Screw
1,15		441033 Z	Sealing ring
1,16		453017 Z	Threaded socket
1,17		232 300 0104 7 E	Protective cap
1,18		241 400 0136 7 E	Holder for oil hose and cable
1,19		241 210 0118 7 E	Cover on air intake housing
1,2		241 210 0117 7 E	Cover housing
1,21		241 210 0114 2 E	Lid nozzle assembly compl.
1,22		241 210 0121 7 E	Air guide
1,23		241 210 0113 2 E	Lid nozzle assembly
1,24	WH200460	241 400 0137 7 E	Kontroll glass
1,25	WH200030	142 013 0115 7 E	Dekselskrue M8x15
1,26		430016 Z	Washer
1,27		241 050 0103 2 E	Flange for QRB1
1,28		426316 Z	Spacing rivet
1,29		241 400 1009 7 E	Set screw
1,3		756159 E	Closing grommet
2.	Tilbehør		
2,1		241 210 0001 2 Z	Accessories set
2,2		402517 Z	Screw M 8 X 30
2,3		430504 Z	Washer
2,4		241 100 0601 2 E	By-pass plug
2,5		716089 E	Plug part ST18/7
2,6		241 210 0112 7 E	Cover for cover
2,7		716087 E	Pin socket ST18/4
2,8	WH200130	491126 E	Oljeslange DN 4 x 1200mm
		491131 Z	Oil hose diffusion proof




4. Pumpe und Ölleitung

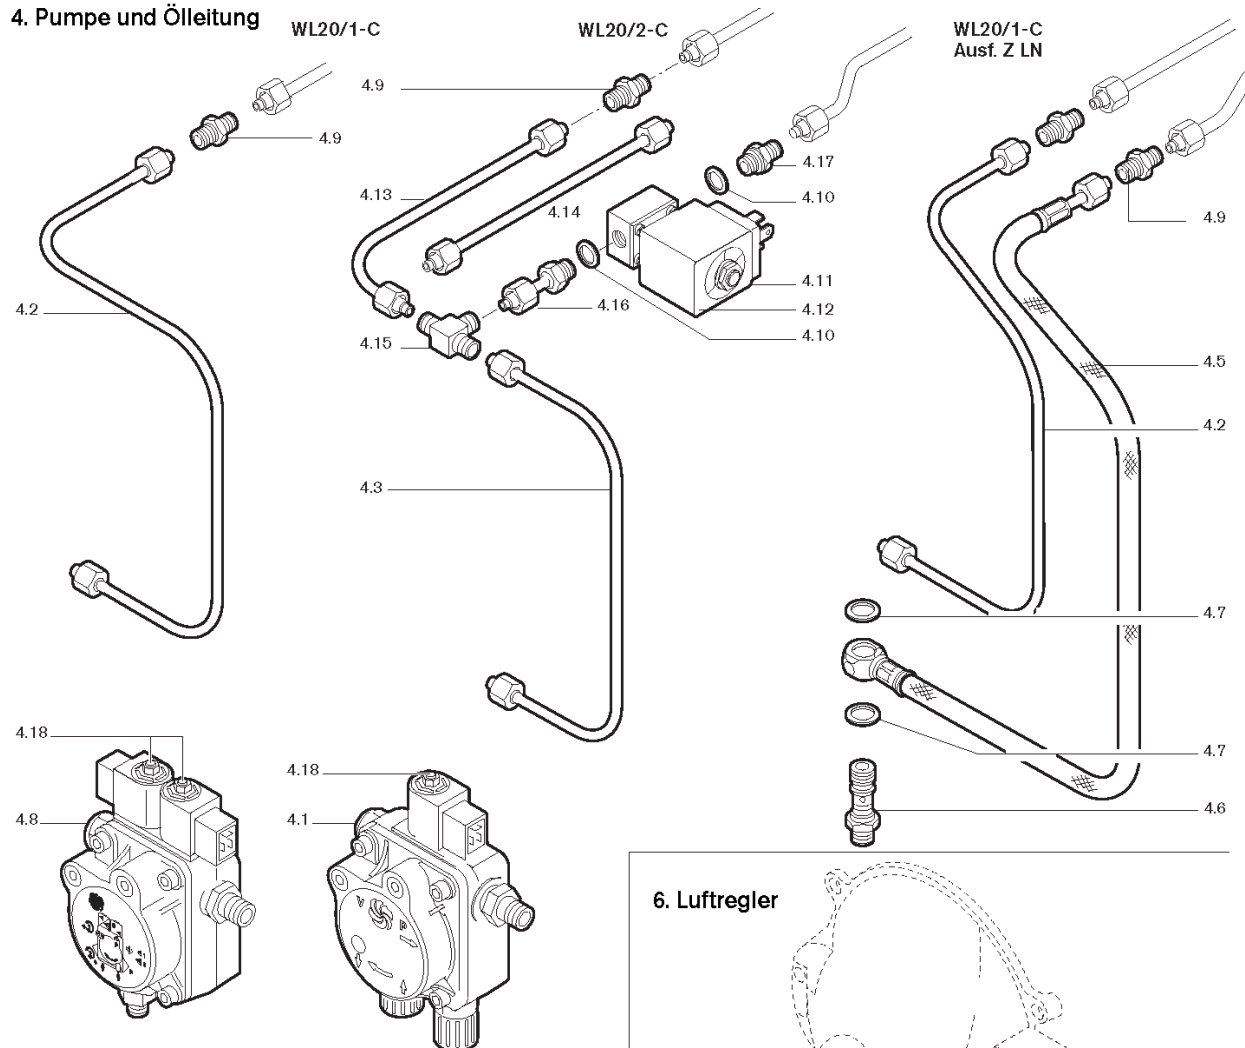

5. Motor mit Gebläse

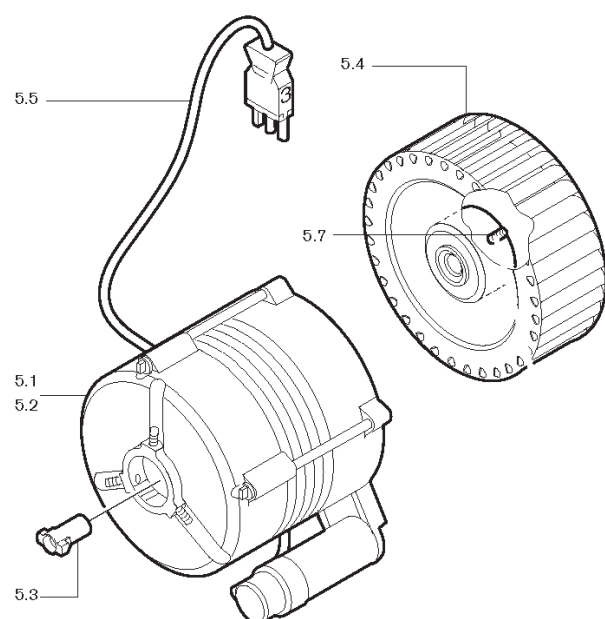

6. Luftregler

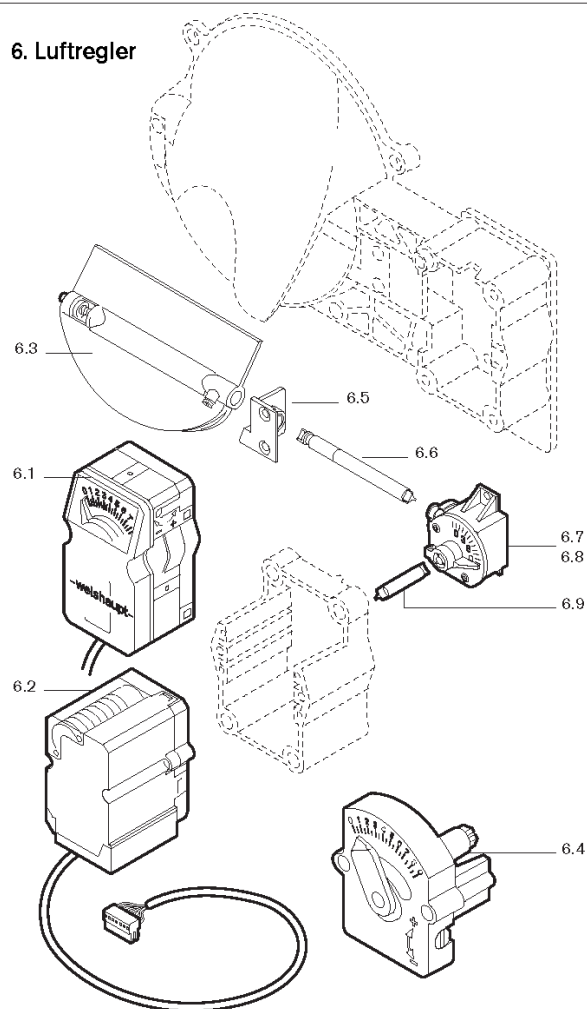




Bilde nr	Holte Industri v.nr.	Weishaupt varenr.	Beskrivelse
4.	Pump and oil lines		
4,1	WH200140	601 138	E Oljepumpe AL 30 C
4,2		241 2100605 8	E Oil line
4,3	WH208585	241 210 0601 8	E Oljerør 4x1mm WL20/2-C-(Z) pumpe til T-stykke
4,4	WH202525		Akselpakning til pumpe
4,5		491 247	E Pressure hose DN4 return
4,6		241 110 0605 7	E Hinge screw
4,7		440 035	Z Sealing ring
4,8	WH200144	601 196	E Oljepumpe AT2 45C
4,9	WH200610	452 020	Z Rørkobling for dieselbrenner Screwed union XG 04-LL
4,1	WH200134	440 027	Z Kobberpakning 10x13,5x1
4,11	WH202560	604 480	E Magnetventil 121Z2323 1/8 230V
4,12	WH200152	604 453	E Magnetspole til 121Z
4,13		241 210 1307 8	E Oil line
		241 210 1308 8	E
4,14		241 210 1309 8	E Oil line
4,15		452 117	Z Connector
4,16		241 210 1302 2	E Threaded socket
4,17		241 210 1310 7	Z Connector
4,18	WH200150	604 429	E M. spole 230V 50/60Hz for
		604 428	E Solenoid coil
4,18a	WH200151		Ventil til oljepumpe AL uten magnetspole
4,19	WH200155	601 107	E Filtersett AL30,ALE30,AL35,
5.	Motor with fan		
5,1	WH200164	652 084	E Motor ECK04/A-2 W20C
5,2		652 086	E
		652 085	E
5,3	WH200190	652 049	E Pumpekupling m/F-2 "ny type"
5,4	WH200170	241 210 0803 2	E Vifte - WL20-WG20
		241 210 0804 2	E
5,5	WH200180	241 400 1211 7	E Motorkabel nr3, eck
5,6	WH200200	713 463	E Kondensator MKP 8/400 for ECK 04/A-2
5,7		420 550	Z Crub screw for fan
6.	Air regulator		
6,1	WH200471	651 049	E Stillmotor W-St02/2 WL10-D og WL20-C
		651 050	E
6,2	WH200470	651 102	E Stillmotor luft std 4,5 WL20-C
6,3	WH200475	241 210 0202 2	E Luftspjeld WL-WG-20
6,4	WH200210	241 050 0202 2	E Justering av luftspjeld
6,5		241 210 0203 2	E Bearing
6,6		241 210 0205 7	E Shaft angle drive-servomotor
6,7		241 110 0205 2	E Angle gearing spring 1
6,8		241 110 0206 2	E spring 2
6,9		241 400 0215 7	E Shaft
6,1		241 210 0208 2	E Air regulator with manual setting
6,11		241 210 0209 2	E Air regulator spring 1
6,12		241 210 0207 2	E Air regulator spring 2



WL20/2-C

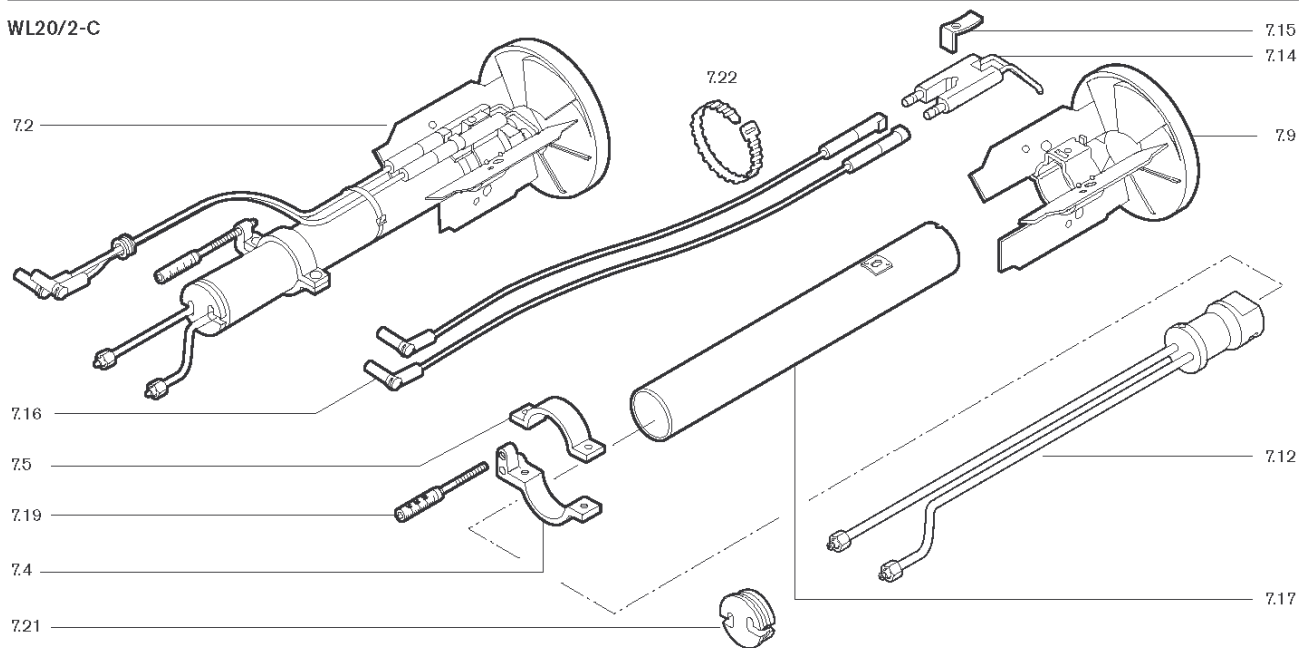




Bilde nr	Holte Industri v.nr.	Weishaupt varenr.	Beskrivelse
7.	Dysesett		
7.			Nozzle assembly
7,1		241 210 1001 0	E Nozzle assembly
7,2		241 210 1002 0	E
7,3		241 210 1003 0	E
7,4		241 400 1006 7	E Switch lever base part
7,5		241 400 1007 7	E upper part
7,6		241 310 1415 2	E Ignition electrode holder
7,7		241 200 1453 2	E
7,8		241 210 1407 2	E
7,9	WH200240	241 210 1409 2	E Flammeholder WL 20/2-C D105
7,1		241 210 1013 2	E Nozzle head cpl.
7,11	WH200236	241 210 1012 2	E Dysehode WL 20/2-C(-Z)
7,12		241 210 1015 2	E
7,13		241 200 1452 7	E Ignition electrode
7,14	WH200230	241 210 1004 7	E Tennelektrode WL20
7,15	WH208501	142 013 1024 7	E Spennfjær til tennelektrode WL
7,16	WH200220	241 210 1102 2	E Tennkabel 380mm WL10-20
7,17		241 210 1001 2	E Guide tube with stop
7,18		241 210 1002 2	E
7,19	WH200222	241 110 1009 7	E Indikator bolt M6x90 WL10C til WL40A
7,2		241 110 1008 7	E Plug
7,21	WH200115	241 210 1005 7	E Oljeslangegjennomføring WL20
7,22		794 089	E Release cable tie
Vises ikke	RE1108462		Filterinnsats filt (500l) Dieselfilter 50-75µm
Vises ikke	FR1752063	1,25-60S	Dyse olje 1,25 gph 60-s
Vises ikke	FR1752163	1,35-60S	Dyse olje 1,35 gph-60-s
Vises ikke	FR1752863	2,0 -60S	Dyse olje 2,00 gph 60-s
Vises ikke	FR1752763	1,75-60S	Dyse olje 1,75 gph-60-s


8. Flammkopf

8.1
8.2
8.3

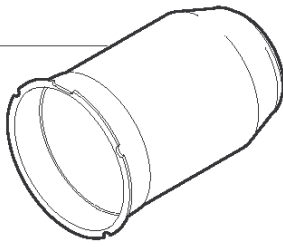


9. Zündgerät

9.1


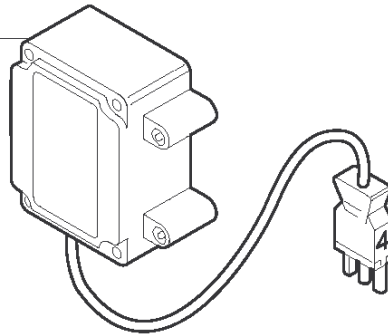


10. Flammenüberwachung

10.10
10.1
10.2

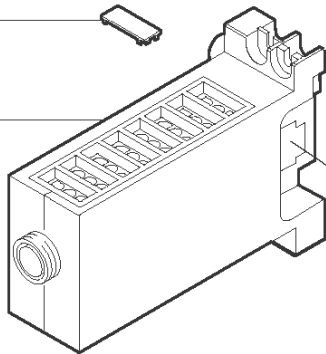

10.3
10.4
10.5

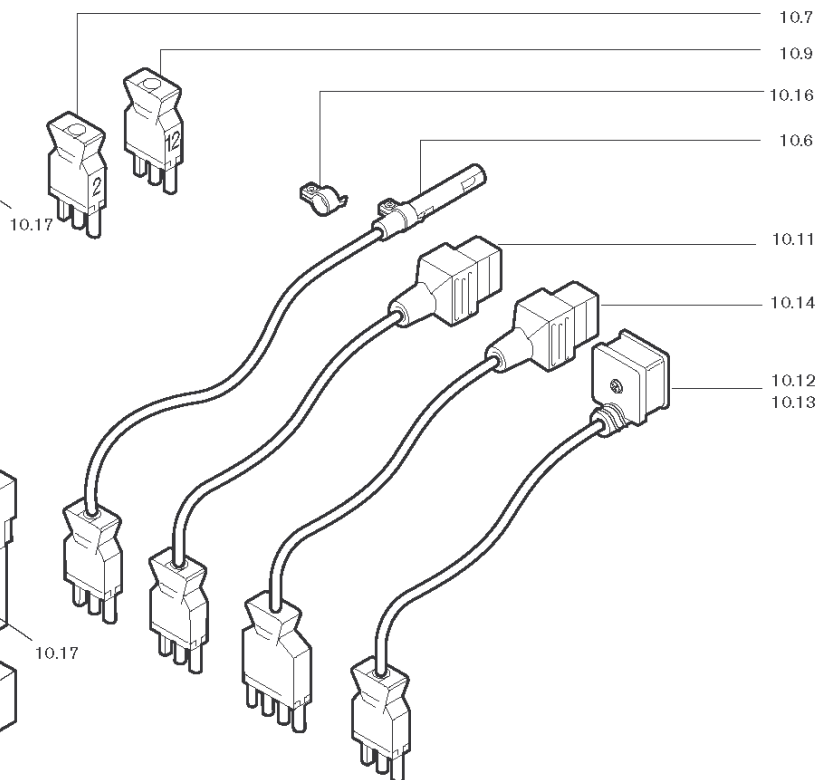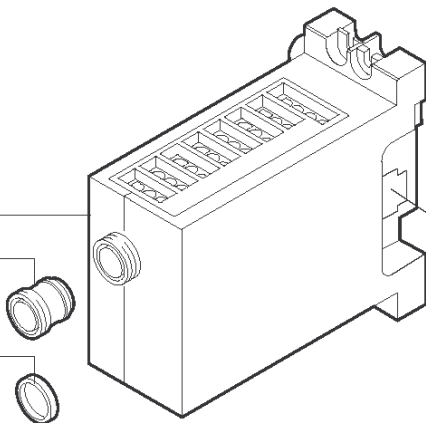

Bilde nr	Holte Industri v.nr.	Weishaupt varenr.	Beskrivelse
8.	Flammehode		
8,1		241 210 1405 2	E Flame tube
8,2	WH200250	241 210 1406 2	E Flammerør WL 20 2C
8,3		241 210 1404 2	E
9.	Starter-enhet		
9,1	WH200260	603 186	E Tennapparat W-ZG01/V 230V
9,2		603 127	E
10.	Flammeovervåking		
			Combustion manager
10,1	WH200270	600 333	E Fyringsautomat W-FM 05
10,2		600 334	E
10,3	WH200320	600 336	E Fyringsautomat W-FM 10
10,4	WH200410	600 357	E Resetknappforlengelse W-FM05
10,5	WH200272	600 358	E Adapterring til fyringsautomat W-FM05
10.6A	WH200280	241 310 1201 2	E Flammeføler QRB1A 9mmØ Brun (gammel)
10.6B	WH200281	241 050 12 072	E Flammeføler QRB4B 11,5mmØ Rød (ny)
	WH200280	241 050 1202 2	E Flammeføler QRB1A 9mmØ Brun (gammel) Flammevakt, fotocelle
10,7	WH200290	240 200 1201 2	E Brostøpsel nr. 2
10,9	WH200300	241 050 1203 2	E Brostøpsel nr.12
10,1	WH200411	600 312	E Lokk AGK 63 W-FM05-W-FM10
10,11	WH200310	142 013 1215 2	E Kabel nr 5 for pumpemagnetvent
10,12		241 210 1202 2	E Plug cable No. 1
10,13	WH200364	241 210 1203 2	E Kabel nr 1 magnetventil
10,14	WH200362	241 210 1201 2	E Kabel nr 5 for pumpemagnetvent
10,16		600 566	E Holder 1096 for QRB1
10,17	WH200430	722 024	E Sikring 6,3 A

Kontaktinformasjon:

Holte Industri AS
Håtteitvegen 13
3810 Gvarv

Telefon 35 95 93 00
e-post: info@holteindustri.no
www.holteindustri.no